VEAM

CIR Series Assembly Guide





ENGINEERED FOR LIFE

ITT Corporation

A Historical Achievement of Technology Leadership

Defining and Championing Innovation

Showcasing a portfolio of creativity, ITT's "Engineered For Life" execution embraces products which have become ubiquitous in a broad collection of markets including: Military/Aerospace, Civil Aircraft, Industrial Instrumentation, Medical, Oil & Gas, Energy, Transportation, Telecom/Handset, Computer, Consumer, and Automotive.

ITT's rich interconnect history embraces contributions to both technological breakthroughs and social movements. With one of the industry's broadest product offerings, ITT's interconnect products have supported:

- Every Free World space mission, bringing the universe to our doorstep.
- Motion picture, radio, and television equipment, serving laughter and entertainment to millions.
- Commercial and military communications systems, linking the voices of the world.
- Computerized tools, reshaping the information highway.
- Aircraft, rapid transit, and automobiles, mobilizing our expanding society.
- Oil and natural gas production, powering the world's economies.
- Agricultural equipment, attacking the roots of world hunger.





Interconnect Solutions

Interconnect Solutions is a division of the multi-national ITT Corporation, a \$11.6 billion dollar global enterprise representing the brands Cannon, VEAM, and BIW. Our connector portfolio remains the most extensive in the industry offering the most reliable and cost effective range of interconnect solutions. These innovations have enabled ITT to provide products and technologies to such markets as:

- Automotive
- Computer/Consumer
- Industrial/Instrumentation
- Military/Aerospace
- · Oil Fields
- Telecom/Handset
- Transportation

When you specify a Interconnect Solutions connector, you can rely on a product designed, developed, and manufactured to the highest quality and reliability standards. This tradition of excellence is based on ITT's corporate culture of operating its businesses under the principles of Six Sigma. At ITT, Six Sigma is not just a quality philosophy but a complete corporate culture that drives the entire business. Our Value Based Management and Value Based Product Development systems are two cornerstones that allow for the development of both leadership and product engineering principles, ensuring the correct industry leading products are developed to the accepted market driven lead times. These principles have allowed ITT to become the market leader in all of our business portfolios.

Six Sigma Manufacturing

ITT operates manufacturing facilities in the United States, Germany, Italy, Mexico, China, Japan and the UK, all of which have particular product area strengths allowing ITT to offer a truly global footprint to our customers. Our facilities are world class and accommodate full vertical integration utilizing the latest manufacturing technologies including: automated and robotic machining centers, Super Market manufacturing cells, Kanban pull systems, and automated electrical, mechanical, and optical test and inspection equipment. The combination of our manufacturing strength and our advanced manufacturing facilities allows ITT to offer products at market driven prices. Our capabilities, especially in robotics, computerized precision tooling, Kaizen Project Management, Six Sigma tools, and testing, give ITT the most optimized global manufacturing footprint in the interconnect industry.

The Custom Difference

As the industry leader in harsh environment interconnect applications, ITT's world class engineering teams will work directly with our customers to design and develop cost effective solutions for their applications. In many cases we may modify one of our standard designs to ensure a highly reliable solution where timing is critical. Yet, in those cases where a complete custom interconnect solution is required, ITT will work with our customer's Engineers to design an interconnect solution which will be cost effective yet highly reliable. As professional consultants, our Engineering teams will provide a thorough systems and mechanical analysis of any proposed solution. These analyses provide our customers with sophisticated electrical signal and mechanical characterizations to determine the best solution for their application.

RoHS Compliance Information

ITT has implemented a strict parts control plan for all ITT electronics plants worldwide that allows the Cannon, VEAM, and BIW connector product portfolios to meet the requirements of European Union Directive 2002/95/EC better know as the Reduction of Hazardous Substances initiative. As appropriate, specific Cannon, VEAM, and BIW products may be ordered with an R prefix number which insures our customers will receive RoHS compliant parts for their commercial electronics applications and equipment. Since most RoHS hazardous substances center around specific metal plating and lead solder coatings, ITT's products for RoHS compliance are available in the following plating finishes: electroless nickel, stainless steel, Anodize over aluminum and Gold plating. It should be noted that gold plating would be recommended as the replacement for tin-lead solder when ordering board mount connectors.



CIR Assembly Guide

Part Number Generation Electrical Properties
Connector Description/Terminology
Jacketed Cable Termination
Individual Wire Termination
Shield Braid Termination
Crimping Electrical Contacts
Crimp Tools - Set Up and Calibration
Soldering Electrical Contacts
Power Crimping Tools
Coaxial Cable Termination
Coaxial Cable Termination
Coaxial Cable Termination
Coaxial Cable Termination 25-26 Connector Accessories 27-31 Cable Clamp, A style 27 Cable Clamp, C style 28
Coaxial Cable Termination 25-26 Connector Accessories 27-31 Cable Clamp, A style 27 Cable Clamp, C style 28 Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range 29
Coaxial Cable Termination25-26Connector Accessories27-31Cable Clamp, A style27Cable Clamp, C style28Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range29Plastic Caps30
Coaxial Cable Termination25-26Connector Accessories27-31Cable Clamp, A style27Cable Clamp, C style28Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range29Plastic Caps30Metal Dust Caps31
Coaxial Cable Termination25-26Connector Accessories27-31Cable Clamp, A style27Cable Clamp, C style28Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range29Plastic Caps30Metal Dust Caps31Crimp Contact Assembly Tools32-33
Coaxial Cable Termination25-26Connector Accessories27-31Cable Clamp, A style27Cable Clamp, C style28Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range29Plastic Caps30Metal Dust Caps31Crimp Contact Assembly Tools32-33Assembly Tool Kits34
Coaxial Cable Termination25-26Connector Accessories27-31Cable Clamp, A style27Cable Clamp, C style28Reduction Sleeves, Hole Plugs, and Grommet Hole Sealing Range29Plastic Caps30Metal Dust Caps31Crimp Contact Assembly Tools32-33Assembly Tool Kits34Recommended Mounting Information and Dimensions for CIR Receptacles35





Table I

Insert Arrangement Service Rating

Service Rating	Operating Voltage DC (at sea level)	Operating Voltage AC (at sea level)
I	250 V	200 V
A	700 V	500 V
D	1250 V	900 V
E	1750 V	1250 V
В	2450 V	1750 V
C	4200 V	3000 V

Table II

Contact Rating

Contact Size	Maximum Current	Rated And Test Current	Potential Drop Millivolts Maximum
		*	*
20	7.5 A	7.5 A	83 mV
18	10 A	7.5 A	83 mV
16-165	22 A	13 A	74 mV
12	41 A	23 A	63 mV
8	73 A	46 A	65 mV
4	135 A	80 A	58 mV
0	245 A	150 A	53 mV
4/0	350 A	225 A	53 mV

Table III

Dielectric Strength (Standard at Seal Level Conditions)

Service Rating	Minimum Flashover AC RMS	Test Voltage AC RMS (Hi Pot)
I	1400 V	1000 V
A	2800 V	2000 V
D	3600 V	2800 V
E	4500 V	3500 V
В	5700 V	4500 V
C	8500 V	7000 V



ітт

BELTRONICA



Figure 1

Exploded View of a typical "Plug"connector

All mating connectors can be classified as either plugs or receptacles. A mating set, consisting of a plug and a receptacle, can be male and female or female and male. A general rule of thumb is to specify socket contacts in the connector identified as the current source. A typical plug connector is illustrated in Figure 1.

The Basic CIR Plug Connector

Plug Connector Description	The basic CIR plug connector consists of the following parts:		
	A. Plugshell- Holds the insulator (insert) and retains contacts.		
	B. Insert - Bonded plugshell insulator to hold contacts firmly. Not removable.		
	C. Contacts - Crimped or soldered to the wire depending on type. (Crimp con- tacts are supplied loose. Solder contacts are factory installed except for sizes 8, 4, and 0). Crimp contacts are designated by F80 in the part number.		
	D. Plugshell Gasket - Square cross section gasket used to seal the plugshell- receptacle interface when the connectors are mated.		
	E. Wave Washer - Ensures positive locking and dynamic seal compression when the connectors are coupled.		
The basic VEAM plug design has a variety of	F. Flat Washer - Presents a smooth bearing surface for the wave washer.		
cable clamps, and wire sealing grommets with associated compression rings, and gland seals for jacketed cables and bushings. Proper selec-	G. Coupling Nut - Provides cam action to pull and lock mating plugs and recep- tacles. Also exerts a cam force for separating the connectors when uncoupling.		
tion of accessory hardware can protect your connections in harsh environments and avoid costly down time for repairs. Please consult the VEAM Technical Service Department for assis-	H. Backshell - An accessory which screws onto the rear of the plug or recepta- cle shell. Contains the wire terminations and provides an interface for other accessories - cable clamps, conduit terminations, etc. Note: Adequate backshell length is important to ensure sufficient working room.		
tance in proper selection.	I. Backshell O-Ring - Maintains a waterproof seal on the thread interface.		
	J. Cable Clamp - An accessory which screws onto a backshell to provide cable jacket seal and/or strain relief for individual wire bundles.		
	K. Grommet - Compressible elastomeric seal for individual wire terminations.		
	L. Compression Ring - A nylon or metal cone which compresses a grommet to seal on the individual conductors when the backshell is in position.		
	<u> </u>		



Figure 2

Exploded View of a typical "Receptacle" connector

The Basic CIR Receptacle Connector

Receptacle Parts Description	The basic parts of the receptacle connector are:		
	A. Receptacle Shell- Usually the fixed half of a mated connector pair. Coupling ramps provide cam action for mating or demating. A stainless steel lock ring at the top of the coupling ramp guarantees long service life and positive locking.		
	B. Insert - Contact insulator which is bonded within the receptacle to hold the contacts firmly. The insert is not removable.		
	C. Contacts - Crimped or soldered to the wire depending on type. (Crimp contacts are supplied loose. Solder contacts are factory installed except for sizes 8.,4, and 0).		
	D. Grommet - Resilient rubber wire sealing device prevents moisture entry into contact wire interface area.		
All plug connector accessory hardware can be used with any receptacle connector.	E. Compression Ring - A nylon or metal cone which compresses a grommet to seal on the individual conductors when the backshell is in position.		
	F. Backshell - An accessory which screws onto the rear of the receptacle shell or plugshell. Contains the wire terminations. Holds grommet and compression ring and/or other accessories in place. A wide variety of backshells are available for various applications.		





Figure 3

Jacketed Cable Termination

Procedure

Recommendation: As cables differ from manufacturer to manufacturer and even lot to lot from the same manufacturer we recommend you make up one assembly first to familiarize yourself with cable lay and wire cross overs.

Table IV

A. When terminating a jacketed cable in application that require sealing the backshell onto the jacket, to guarantee effective sealing, the jacket strip length must be precisely determined. This ensures proper location of the gland seal in the cable clamp mechanism. Strip length for the jacket must also be maximized to permit adequate "working room." This permits the assembler to crimp contacts onto wires and insert them into connectors.

B. To calculate strip length for the jacket (Dimension B): Subtract Dimension A from Dimension L.

C. Use care in removing the jacket and any cable filler material. Cuts or nicks in the wire insulation can generate problems.

D. Strip individual wires according to Table IV below:

Contact Size	Crimp Contact P/N		Conductor Dimer	Strip Length Ision C
	Pin	Socket	(mm)	inch
20	46730-20	46731	(4.8)	.18
18	46740P	46740S	(4.8)	.18
16S	27911	27961	(6.4)	.25
16	27913	27963	(6.4)	.25
12	27914-26	27964-26	(8.5)	.33
8	27915	27935	(12.7)	.50
4	27916	27936	(12.7)	.50
0	27917	27937	(14.0)	.55
4/0	47107-165	47114-165	(23.0)	.90
	Solder Contact P/N			
	Pin	Socket		
16S	27901	27951	(6.4)	.25
16	27903	27953	(6.4)	.25
12	27904	27954	(9.5)	.37
8	27905	27925M	(12.7)	.50
4	27906	27926	(15.9)	.62
0	27907	27927	(16.0)	.63





Figure 4

Jacketed Cable Connector Assembly Sequence

BELTRONICA

E. Assemble the connector components onto the cable in the order shown in Figure 4. Procedure (continued) F. Double check the cable clamp sealing range to be certain it is sized properly for your cable. Page 28, Dimension B. G. Crimp contacts onto wires following the step-by-step instructions on pages 17-23. H. Using the proper insertion tool (see page 32-33)*, with a straight motion, push the contacts from rear of the insert into the proper cavity until seated. See table V, on page 11 for seating dimensions. * When installing size 12 or smaller female contacts, guide pins should be used to ease entry and prevent shaving the insert retention shoulders. See Page 12 for installation. Use isopropyl alcohol **only** as a lubricant. The extraction tool can be used to reposition the contacts if they are inserted too deeply. I. Place flat washer and wave washer into the coupling nut and then slide forward over the plugshell. Note: Wave washer split must bear against the flat washer. J. Couple the plug onto a mating receptacle shell or dummy receptacle (clamp the receptacle horizontally in a vise). K. Slide the wire sealing grommet** forward over the contact wire junctions. Make certain any alcohol has evaporated. L. Slide the compression ring** forward over the rear of the grommet. M. Check to make certain that the backshell O-ring** is installed into its internal groove. ** if supplied N. Slide the backshell forward and screw it onto the rear of the plugshell. Proper torque values are shown in Table VI, page 12. O. Slide the cable clamp (if provided) forward and screw onto the rear of the backshell using the same torque values. Use isopropyl alcohol only as a lubricant. Page 28 shows the clamp size and cable sealing range with and without a bushing. P. Perform a continuity check to insure all wires in the cable are properly termi-卷 ітт nated. Label as required.





Individual Wire Termination Procedure (Shown on receptacle connector)

A. Strip ends of the wires according to Table IV, page 9.

B. Slide connector components onto the cable in the order shown in Figure 5. Double check the cable clamp sealing range to be sure it is sized properly for your wire bundle (listed on page 27).

Important: Install wires through the grommet in the same orientation as they will be installed into the insert.

C. Crimp contacts onto wires following the step-by-step instructions on pages 17-23.

D. Grasp the receptacle flange gently in a vise to hold it firmly. Cushion the vise jaws to protect the connector finish.

E. Using the proper insertion tool (pages 32-33), push the contacts into the proper cavity with a straight push until seated. Use isopropyl alcohol **only** as a lubricant. The proper seating dimension is per Table V. Use the extraction tool to reposition the contacts if inserted too deeply.

Figure 6



BELTRONICA 🔆 ITT

Consult our customer service department for seating dimensions of special insert arrangements: 16A-10, 18-1, 22-27, 24A-6, 24-2GM, 32A-69, 32-101, 32A-1, 36A-72, 40A-5.

Table	V

SEATING DIMENSIONS				
	Pin Contact	Socket Contact		
SIZE	S dim (<u>+</u> .032")	R dim (<u>+</u> .032")		
20	.433	.059		
18	.307	.118		
16S	.095	.095		
16	.280	.095		
12	.095	.095		
8*	.236	.200		
8	.095	.095		
4	.095	.095		
0	.095	.095		
4/0	.098	.098		

Dimensions are in inches.

* (Coax)

Note: All contacts do not need to be the exact same height when seated but must fall within the seating dimensions and tolerances stated in Table V as measured from the top of the shell to the top of the contact (see Figure 6). Important: When installing size 12 or smaller female contacts, guide pins should be used to ease entry and prevent shaving of the shoulders in the insert (See figure 7). Use isopropyl alcohol **only** as a lubricant.



Figure 7

F. Slide the wire sealing grommet** forward over the contact wire junctions.

G. Slide the compression ring** forward over the rear of the grommet.

H. Be sure that the backshell O-ring** is installed into its internal groove.

I. Slide the backshell forward and screw onto the rear of the plugshell using a torque wrench or a strap wrench (see page 34). Proper torque values are showin in Table VI.

J. Slide the cable clamp** forward and screw onto the rear of the backshell using the same torque values.

K. Perform a continuity check to insure all wires in the cable are properly terminated. Label as required.

** if supplied

Recommended Torque Forces Connector Backshells/Clamps				
Size	In. Ib Min/Max	Size	In. lb Min/Max	
10SL	26/31	22	87/104	
14S	44/49	24	96/130	
16	57/66	28	121/165	
165	57/66	32	130/182	
18	61/69	36	165/235	
20	69/87	40	182/347	

Table VI



Styles WK1, SB

Termination of shielded cables is sometimes necessary to provide RFI or EMI assembly protection. The CIR Series has numerous methods for attaching shield braid to the connector backshell. Two of the most popular types are described below. For other types, consult our customer service department.

Style WK1 Termination

The Style WK1 termination method utilizes a stainless steel garter spring that concentrically closes to mechanically grip and electrically terminate the overall shield to the connector backshell. The assembly also incorporates an O-Ring. It closes down on the cable jacket providing a high pressure environmental seal.

Figure 8



1. Strip the jacket and shield away from the individual conductors to a length corresponding to Dimension B - see Figure 10 and Table IV, page 9. Use caution. Do not nick the wire insulation.

To determine jacket strip length "B," subtract dimension "A" and .250 from "L." Dimension "A" is from the front of the backshell to the base of the O-Ring groove.



2. Open a "window" in the cable jacket .300 wide and .200 inches back from the stripped end as shown in Figure 10.

3. Strip the individual wires according to Dimension C, Table IV, page 9.



VEAM CIR Assembly Guide

Figure 10



Table VI A Backnut Assembly Torque Values

P/N Suffix Designation	Cable min	Range max	Inch Pounds Min.	Newton Meter
-01	.062	.125	15	1.73
-02	.125	.250	20	2.30
-03	.250	.375	30	3.45
-04	.375	.500	35	4.03
-05	.500	.625	40	4.60
-06	.625	.750	45	5.18
-07	.750	.875	50	5.75
-08	.875	1.000	55	6.33
-09	1.000	1.125	60	6.90
-10	1.125	1.250	65	7.48
-11	1.250	1.375	70	8.05
-12	1.375	1.500	75	8.62
-13	1.500	1.625	75	8.62
-14	1.625	1.750	75	8.62
-15	1.750	1.875	75	8.62
-16	1.875	2.000	75	8.62

4. Disassemble the connector and slide the components back over the cable as shown in Figure 11.

5. Crimp contacts onto the wires. Follow step-by-step instructions on pages 17 to 23.

6. Using the proper insertion tool (pages 32-33),* push contacts from rear of the insert into the proper cavity using a straight push until seated. For proper seating dimension See Table V page 11. Use isopropyl alcohol **only** as a lubricant.

* Important: if installing size 12 or smaller female contacts, guide pins should be used to ease entry and prevent shaving of the insert retention shoulders. (See Figure 7, Page 12).

7. Place flat washer and wave washer into the coupling nut and then slide forward over the plugshell.

Note: Wave washer split must bear against the flat washer.

8. Couple plug onto a mating receptacle shell or dummy receptacle. Clamp the receptacle horizontally in a vise.

9. Insure that backshell O-Ring (if supplied) is installed into its internal groove.

10. Slide the backshell forward and screw it onto the rear of the plugshell. Proper torque values are shown in Table VI, page 12. The shield window will be in the area of the base of the 45 degree angle chamfer at the rear of the backshell, as shown in Figure 11.

11. Slide the backnut assembly forward. Screw it onto the backshell using the torque values listed in table VI A.

12. Perform a continuity check to ensure all wires on the cable are terminated properly and that the shield is electrically connected to the backshell. Assembled view is shown in Figure 11.



www.ittcannon.com

Style SB Termination

This style SB termination method uses a backshell with a screw-on backnut to capture the braid thereby mechanically and electrically terminating it to the backshell. Because there is no sealing provision for jacketed cable with this design, for environment protection, a knurl on the backnut and a rib on the backshell provide retention for a heat shrink.





FINISHED CONNECTOR

* - Consult VEAM Customer Service for Heat Shrink Boots.

1. Strip back outer jacket and remove any filler material. Nicks are not permissible on the conductor insulation. Use Table VII to determine the proper strip length.

Figure 13



Table VII

Size	Х	Y
10SL	53	23
14S	53	23
16	53	24.5
165	68	28.5
18	68	28.5
20	75	28.5
22	75	28.5
24	75	28.5
28	75	28.5
32	75	28.5
36	75	28.5
40	75	28.5

Dimensions are in mm.



2, Slide connector components back over the cable as shown in Figure 14.

Figure 14



3. Strip the individual wires according to Table IV page 9.

4. Crimp the contacts onto the wires following the step-by-step instructions on pages 17-23.

5. Using the proper insertion tool (refer to pages 32-33),* push contacts into the proper cavity with a straight push until seated. Check proper seating dimension per Table V, page 11. Use isopropyl alcohol **only** as a lubricant. * *Important: if installing size 12 or smaller female contacts, guide pins should be used to ease entry and prevent shaving of the insert (See Figure 7, Page 12). Use the extraction tool to reposition the contact if inserted too deeply.*

6. Place flat washer and wave washer into the coupling nut and then slide forward over the plugshell. *Note: Wave washer split must bear against the flat washer.*

7. Couple plug onto a mating receptacle shell or dummy receptacle. Clamp the receptacle horizontally in a vise.

8. Push the grommet forward over cable and bring to bear against back of insert in plugshell. Important: A separate compression ring is not required with the SB style backshell. Compression ring geometry is duplicated within the backshell body.

9. Slide the backshell forward. Tighten it onto the rear of the plugshell using an adjustable wrench.

10. Pull the metal shield up over the wire groove in rear of backshell. Bring to bear against back of threads. Do not cover threads with the metal shield. See Figure 12A, page 15.

11. Wrap a precut length of steel wire completely around portion of metal shield that is positioned over wire groove in the backshell. Using pliers, twist ends of wire together until the shield is securely held inside the groove. Trim off any excess wire or shield braid.

12. Slide the backnut forward over the cable. Tighten securely to the backshell, using a strap wrench.

13. Slide a heat shrink boot up over the rear of the connector until it covers the backnut and metal cable shield. Cover completely.

14. Shrink the boot with a heat gun. After the shrink boot cools, check to make sure the backnut and metal shield are sealed. See Figure 12B, page 15.

15. Perform a continuity check on wiring and verify proper assembly per the schematic.



Table VIII

Contact	Wire Size	VEAM Contact	AF8 o	r M2252 land Tool	0/1-01 s	Model 40 Pneum	0 BHD atic	Mode Pneu	l 500 D Imatic
Size	AWG	Number	Turret	Setting	Color	Die Part No.	Locator Part No.	Die Part No.	Locator Part No
20P	20	46730-20P	616266	20/4	Red			•••••	
20S	20	46731	616266	20/4	Green				
18P	18	46740P	TH485	20/4	Yellow				
18S	18	46740S	TH485	20/4	Red			•••••	
18P	20-22	46740-15P	TH485	20/4	Yellow			••••	
18S	20-22	46740-155	TH485	20/4	Red				
18P	16	46740-22P	TH485	16/6	Yellow				
18S	16	46740-225	TH485	16/6	Red				
16S P	16	27911	616266	16/6	Red	414DA-16N	4314-2	•••••	
16S S	16	27961	616266	16/6	Red	414DA-16N	4314-1	•••••	
16S P	20-24	27911-13	616266	20/4	Red				
16S S	20-24	27961-13	616266	20/4	Red			•••••	
16S P	20	27911-15	616266	18/5	Red	414DA-16N	4314-2		
16S S	20	27961-15	616266	18/5	Red	414DA-16N	4314-1		
16S P	14-16	27911-20	616266	16/6	Red	414DA-12N or 16N	4314-2		
16S S	14-16	27961-20	616266	16/6	Red	414DA-12N or 16N	4314-1		
16S P	12-14	27911-26	616266	12/8	Red	414DA-12N	4314-1		
16S S	12-14	27961-26	616266	12/8	Green	414DA-12N	4314-2	•••••	
16 P	16	27913	616266	16/6	Blue	414DA-16N	4332		
16 S	16	27963	616266	16/6	Green	414DA-16N	4332		
16 P	24-26	27913-08	616266	20/4	Blue				
16 S	24-26	27963-08	616266	20/4	Green				
16 P	20-22	27913-12	616266	20/4	Blue				
16 S	20-22	27963-12	616266	20/4	Green				
16 P	20-24	27913-13	616266	20/4	Blue			•••••	
16 S	20-24	27963-13	616266	20/4	Green			•••••	
16 P	18-20	27913-15	616266	20/5	Blue	414DA-16N	4332	•••••	
16 S	18-20	27963-15	616266	20/5	Green	414DA-16N	4333	•••••	
16 P	14-16	27913-20	616266	16/6	Blue	414DA-12N or 16N	4332	••••	
16 S	14-16	27963-20	616266	14/7	Green	414DA-12N or 16N	4333	••••	
16 P	12-14	27913-26	616266	12/8	Blue	414DA-12N	4332		
16 S	12-14	27963-26	616266	12/8	Green	414DA-12N	4333		
12 P	8	27914-8				414DA-8HEX or 8N	4330M	•••••	
12 S	8	27964-8				414DA-8HEX or 8N	4331M		
12 P	20-22	27914-12	616266	20/4	Green				
12 S	20-22	27964-12	616266	20/4	Green				
12 P	14-18	27914-20	616266	12/8	Green	414DA-10N	4330		
12 S	14-18	27964-20	616266	12/8	Green	414DA-10N	4331		
12 P	2.5mm ²	27914-22	616266	12/8	Green	414DA-10N	4330	•••••	
12 S	2.5mm ²	27964-22	616266	12/8	Green	414DA-10N	4331	•••••	
12 P	12	27914-26	616266	12/8	Green	414DA-12N or 10N	4330	•••••	
12 S	12	27964-26	616266	12/8	Green	414DA-12N or 10N	4331	•••••	
12 P	4mm ²	27914-30				414DA-10N	4330	•••••	
12 S	4mm ²	27964-30				414DA-10N	4331	•••••	
12 P	10	27914-38				414DA-10N	4330	•••••	
12 S	10	27964-38				414DA-10N	4331		



BELTRONICA

Table VIII

Contact	Wire	VEAM	AFB Hand Tool	Model 400 BH Pneumatic	Model 400 BHD Pneumatic		c D
Size	Size	Contact			Locator		Locator
	AWG	Number	Turret	Die Part Number	Part	Die Part Number	Part
					Number		Number
					-		
8P	4 mm sq	27915-30		414DA-10N	4329		
85	4 mm sq	27935-30		414DA-10N	4329		
8P	10	27915-38		414DA-10N	4329		
85	10	27935-38		414DA-10N	4329		
8P	6	27915-58		414DA-8 HEX	4329	514DA-8 HEX	5497
85	6	27935-58		414DA-8 HEX	4329	514DA-8 HEX	5497
8P	8	27915		414DA-8 HEX OR 8N	4329	514DA-8 HEX	5404
85	8	27935		414DA-8 HEX OR 8N	4329	514DA-8 HEX	5404
8P	12-14	27915-26-62		414DA-8N	4329	514DA-8 HEX	5404
85	12-14	27935-26-62		414DA-8N	4329	514DA-8 HEX	5404
8P	12-14	27915-26		414DA-10N	4329		
85	12-14	27935-26		414DA-10N	4329		
4P	4 AWG	27916		414DA-4 HEX	4043	514DA-4 HEX	5497
	6 AWG			414DA-8N or 8 HEX		514DA-8N or HEX	
45	4 AWG	27936		414DA-4 HEX	4043	514DA-4 HEX	5497
	6 AWG			414DA-8N or 8 HEX		514DA-8N or HEX	
4P	2.5 mm sq.	27916-22		414DA-12N	4043		
4S	2.5 mm sq.	27936-22		414DA-12N	4043		
4P	16 mm sq	27916-62		414DA-4 HEX	4043	514DA-4 HEX	5497
4S	16 mm sq	27936-62		414DA-A HEX	4043	514DA-4 HEX	5497
0P	0	27917V					
05	0	27937V				514DA-0 HEX	5441
0P	8	27917-45				514DA-0/8 HEX	5442
05	8	27937-45				514DA-0/8 HEX	5441
0P	10 mm sq	27917-50				514DA-0/8 HEX	5442
05	10 mm sq	27937-50				514DA-0/8 HEX	5441
0P	16 mm sq	27917-62				514DA-4 HEX	5442
05	16 mm sq	27937-62				514DA-4 HEX	5441
0P	25 mm sq	2/91/-/8				514DA-4 HEX	5442
05	25 mm sq	2/93/-/8				514DA-4 HEX	8002
0P	35 mm sq	27917-90				514DA-0 HEX	5442
05	35 mm sq	27937-90				514DA-4 HEX	5442
0P	50 mm sq	27917-107				514DA-4 HEX	5442
05	50 mm sq	2/93/-10/				514DA-0 HEX	5441
0P	4	46646-0				514DA-4 HEX	5441-F
05	4	4764-0				514DA-4 HEX	5441-F
4/0 P	2	4/10/-90				514DA-0 HEX	5498-1
4/0 5	2	47114-90				514DA-0 HEX	5498-2
4/0 P	U (1/U)	4/10/-115					5498-1
4/0 5	U (1/U)	47114-115					5498-2
4/0 P	2/0	4/10/-135					5498-1
4/0 5	2/U 70 marca	4/114-135					5498-1
4/0 P		4/10/-144					5487
4/0 5	/umm sq	47114-144					548/
4/0 P	95 mm sq	4/10/-165					5487
4/0 5		4/114-105					5487
4/0 P	4/0	4/10/-165					5487
4/0 5	4/0	4/114-165				5140A-4/0 HEX	5487

 * TH378 & TH379 maybe combined into one turrent under P/N 616266



1. Select the proper crimp tool and contact locator for the contact used from Table VIII. Contacts Size 8 and larger require a pneumatic crimper (See Page 22).

2. Install the proper turret or contact positioner onto the crimp tool frame. Per Table VIII.

3. Check crimp tool calibration with a Go No-Go gauge (refer to page 21 for AF8 calibration). Go No-Go inspection gauges are available- consult factory.

4. Set the tool for the contact being crimped as per Table VIII, page 17.

5. Insert stripped wire into the contact wire bucket.

6. Check inspection hole to see if the wire strands are evident. If you cannot see them, conductor strip length is too short. See Figure 15



7. Insert the contact with the wire installed into the contact locating hole in the crimp tool positioner until it "bottoms" in the locating hole.

8. Activate crimp tool through one complete cycle.

Important: Tool ratchet action will not allow the contact to be removed in mid cycle.

9. Examine the crimp joint for proper crimp location (see Figure 16). Loose wire strands or cracks in the contact crimp area must not be allowed. Proper crimp retention forces are detailed in Table IX.



Crimping Tools - Set up and Calibration



Crimp Tool Set Up - AF8 or M22520/1-01

1.Select proper turret from Table VIII, Page 17 and install it onto the AF8 crimp tool frame with the hex wrench supplied with the tool (9/64 hex).

Changing Turret Head

All turrets are attached by means of two socket head screws.

Press the trigger which releases the Turret to the indexing position.

With screws lined up with the tapped holes, place the selected Turret Head Assembly onto the retainer ring.

After the Turret Head Assembly is seated against the ring, tighten the socket head screws with a 9/64 inch Allen Wrench. Turret should index easily without binding.

To remove, loosen socket head screws until the threads are disengaged from the retainer ring and remove with a straight lifting motion.

Using Indentor Closure Selector

Figure 19b

Refer to data plate on Turret Head Assembly and Table VIII, page 17 for wire and contact size (Figure 19a).

Remove the spring clip lock from selector knob.

The tool must be in the open position when using selector.

Raise selector knob and rotate to desired selector setting (Refer to Table VIII, page 17). Replace the spring clip. The tools is ready for use. Repeat the instruction procedure when changing contact and/or wire sizes.



Figure 19a

Typical Data Plate

CONTACT	COLOR CODE	26	24	22	20	18	16	14	12	WIRE SIZE
-20	RED	1	2	3	4					
-16	BLUE				4	5	6			SEL. No.
-12	GREEN							7	8	

2. Adjust the indentor closure selector per Figure 19b.







VEAM CIR Assembly Guide

Indexing Turret Head

Assemblies:

Press trigger to release the Turret to the indexing position.

Select the setting desired according to color coded data plate on Turret Head Assembly (Figure 19a) and Turret setting chart, page 17.

Index the Turret until the color coded positioner is lined up with the index mark on the Turret Head Assembly. The trigger will position the Turret.

Press the positioner until it snaps into locked position.



You are now ready to check calibration and crimp wire into the contact.

1. Set the selector knob to position No. 4 (whether the turret is installed or not is

3. Insert the "Go" gauge (G125) as shown in Figure 21a. The gauge must pass freely

4. Insert the "No-Go" gauge shown in Figure 21b. The gauge must not enter

Crimping Tools and Calibration - AF8

2. Move the handles to the fully closed position.

between the indentor tips. Remove the gauge.

Caution: Do not crimp the gauge.

between the indentor tips.







Figure 21c

immaterial).



Pneumatic Crimp Tool Set Up - Model 400BHD and Model 500

Model 400 BHD and 500 crimp tools are precision, pneumatic, full cycling tools. They are capable of producing four-indent crimps on pin and socket type contacts size 12 through 300 MCM, hex crimps on pin and socket type contacts size 0, 4, and 8, and twoindent crimps on terminals, splices or pigtails, insulated or non-insulated through wire sizes 26-300 MCM. Flexibility is achieved by simply changing heads and locators in accord with factory directions. Either tool is usable as a portable hand tool, a bench-mounted hand controlled tool, or as a foot controlled unit. They are designed and tested to operate on a supply of clean dry air or inert gas within a pressure range of 90 to 125 PSI (maximum) depending on the size of contacts or terminals to be installed. *Installation must include a good regulator with filter installed within 25 feet of the tool.*

The air inlet port is tapped to accommodate 1/4 NPT fittings. You may use direct pipe thread fittings or quick disconnect. To avoid leakage or damage to the threads, always use a non-setting pipe thread compound or soft grease when installing connections. Connection should be tight enough to prevent leakage.

Be sure that proper location and die assembly head are installed before turning on air supply.

Installation of Location and Die Assembly Head	1. The Locator must be seated in counterbore flush with retainer face. The Locator number should be visible. The Die Assembly must locate on the index pin and sit flat on the retainer face. The nut must be securely screwed down on the barrel (use spacer if provided).
Refer to Crimping Tool Selector on page 17.	2. Turn air on. Adjust to approximately 100 PSI. Operate the trigger with- out a contact and wire in place. Observe the action of the indentors to be sure they operate freely.
Gaging: Four-Indent and Hex Crimp Die Assemblies	All pin/socket crimp die assemblies are clearly marked at the factory with the "Closed Diameter" of the indentors, and may be gaged with check pins, .005 under marked diameter for "Go" and .002 over marked diame- ter for "No-Go."
Gaging: Terminal Die Assemblies	After observing the free action of indentors, hold the trigger or foot con- trol in the "On" position and check with the proper size gage or pin. The "Go" gage shall enter freely. The "No-Go" gage should not enter. <i>Caution: Do not crimp against gage! To do so will injure the tool and</i> <i>void your warranty.</i>
Gaging. Terminal Die Assemblies	All terminal crimp die assemblies are clearly marked at the factory with the "Gaging diameter" of the indentors and may be gaged with check pin, .005 under marked diameter for "Go" and .002 over marked diameter for "No-Go."
	After observing the free action of indentors, hold the trigger or foot con- trol in the "On" position and check with the proper size gage or pin. The "Go" gage shall enter freely. The "No-Go" gage shall not enter. <i>Caution: Do not crimp against gage! To do so will injure the tool and</i> <i>void your warranty.</i>
	3. Insert the contact or terminal and wire assembly and proceed to crimp. Test a few crimped samples every day to be sure all quality requirements are within the limits of the applicable MIL specification.





Cycling Mechanisms	To check proper operation of the cycling mechanism, reduce the line pressure to the minimum necessary to operate the tool without a contact and wire assembly in position (usually about 20 to 25 PSI). Insert contact and wire assembly into position.
	Activate the trigger or foot control. The indentors should lock on the contact and wire assembly and shall not release until the air supply is either increased to the normal operating range, (tool completes cycle); or, is completely disconnected from the air supply.
	This check should be made once per week; or, after every 10,000 crimps, whicheve occurs first. Tests should be under the direction of responsible personnel from Quality Control or Plant Supervisor.
	To use as a foot controlled unit: a. First, disconnect from the air supply.
	b. Remove the 1/4 NPT socket head plug from the center of the rear casting. Re-install it in the rear of handle, using a non-setting pipe compound o soft grease.
	c. In the center of the rear casting, install 1/4 NPT brass coupler bushing, or a quick disconnect fitting.
	d. Connect the hose from the foot control pedal to the tool. Connect the air supply to the inlet port of the foot control.
	e. You can now proceed as instructed in #1.
	All parts of the Model 400 BHD and 500 are precision made from the finest materials, designed to give long satisfactory service. All are warranted to be free from manufacturing or material defects for one (1) year.
	To be sure that you obtain peak performance, we recommend that your tool be returned to the factory at least once per year for the regular overhaul and test. Service can be completed normally within five (5) days at a moderate cost. If the preceding instructions are carefully followed and the tool is not abused, you can count on many years of reliable, trouble-free performance. Caution: Do not attempt to disassemble power unit, trigger handle, or foot control unit, at any time. To do so will yoid your warranty

Soldering Electrical Contacts

As soldering is a known art and an acquired skill, we will not attempt a tutorial on the proper procedure in this manual. Explicit instructions are available from the VEAM Customer Service Department upon request.

It is necessary, however, to point out the following Do's and Don'ts:

Do:	Don't:
Use rosin core flux	Use acid core flux
Use a solder iron sized for the job	Use a too hot iron or torch
Allow the solder to flow properly	Cool the soldered joint rapidly
Clean the soldered joints	Create "solder bridges"
Inspect each soldered joint	Burn the insulators with prolonged heat

Solder and solder aids (tools, flux, instructions, etc.) are available from: Kester Inc. 800 West Thorndale Ave. Itasca, IL 60143 1-800-253-7837 www.kester.com





TENSILE STRENGTH AND MILLIVOLT DROP MEASUREMENTS MEET THE REQUIREMENTS OF MIL- C-39029, MIL-C-22520, MIL-T-7928 AS APPLICABLE.

Pneumatic Power Crimping Tool Model 400B HD

This lightweight (16 lbs.) crimping tool will crimp pin and socket contacts as well as solderless terminals. Non-adjustable dies are available to accommodate wires ranging from 16AWG through 4AWG.The four-indent crimp jaws guarantee a perfect gas tight crimp every time, maximizing wire-contact pull-out forces. Locators are available for every CIR series contact.

The Model 400B HD Power Crimp Tool is excellent for high production runs of small gauge contacts.

Operating Air pressure: 100-120 PS Size: 4" O.D. x $12^{3/4}$ "Long Bench mounting version is standard. Foot pedal # 104 available. For large contacts and terminals use our Model 500D Tool.

This tool is available from Pico Corporation Phone: (805) 388-5510 Fax: (805) 482-4038





Pneumatic Power Crimping Tool Model 500D

This power crimping tool will handle pin and socket contacts plus lug terminals (insulated or non-insulated) in all sizes ranging from 8AWG to 250 MCM. Bench mounting version is standard. Foot pedal #105 available.

Consult our factory for foot pedal accessories.

Shipping weight: 45 lbs. approximate.

Operating Air pressure: 100-120 PSI.

This tool is available from Pico Corporation Phone: (805) 388-5510 Fax: (805) 482-4038



Assembly Procedure for F80 Style Coaxial Contacts (Size 8)

1. Cut the end of the cable squarely, do not crush.

2. Strip the outer jacket, trim the braid and strip the inner conductor insulation as shown below. Use care not to nick braid or inner conductor.



- 3. Assemble components in following order:
 - a. Solder the inner contact to the inner conductor.



b. Slide crimp ferrule over the braid and the locknut over the insulation.



c. Install the retainer (tapered end first) over the insulation so that the retainer slides under the locknut and under the braid until it butts against the jacket. The braid will be sandwiched between the retainer and the crimp ferrule.



- d. Slide the metal spacer over the inner insulation against the retainer.
- e. Assemble the rear teflon insulator over the inner contact (the insulator is split) against the spacer, with the flat surface facing front.



f. Assemble the O-ring over the inner contact up to the rear insulator. Slide the front teflon insulator over the inner contact with the flat surface facing the O-ring.



g. Position the crimp ferrule against the locknut and crimp the braid and retainer together using the crimp tool per Table X. Slide the assembled components into the outer contact body, which has been previously installed into the insert at the factory and tighten the lock nut,



Table X

	CRIMP TOOLS FOR COAXIAL CONTACTS										
Contact P	art Number										
Pin	Socket	Cable	Crimp Tool	Crimp Die							
C8-058P	C8-058S	RG 58	M22520/5-01	M22520/5-05							
C8-062P	C8-062S	RG 59 & RG 62	M22520/5-01	M22520/5-05							
C8-142P	C8-142S	RG 142	M22520/5-01	M22520/5-05							
C8-174P	C8-174S	RG 174 & RG 188	M22520/5-01	M22520/5-06							
C8-179P	C8-179S	RG 179	M22520/5-01	M22520/5-06							
C8-180P	C8-180S	RG 180	M22520/5-01	M22520/5-05							
C8-400P	C8-400S	RG 400	M22520/5-01	M22520/5-05							





Figure 25 - PIN CONTACT

BELTRONICA

Figure 26 - SOCKET CONTACT

VEAM CIR Assembly Guide

Connector Accessories

Cable Clamp MS 3057-XXA

Concentric cable clamps. They insure strain relief and central location of the cable. Can be used with bushing MS 3420.

"A" Style Clamp With Bushing



MS 3057-XXA

Shell Size	Clamp Part Number	A thread class 2B (inches)	Ba mm /	lia. inch	D mm /	inch	G mm /	inch	E-F mm	Q inch	Used With Bushing Part Number
10SL	MS3057-4A	.625-24UNEF	8.0	.32	10.5	.41	20.6	.81	22.0	.87	MS3420-4
145	MS3057-6A	.750-20UNEF	11.0	.43	10.5	.41	22.2	.87	27.0	1.06	MS3420-6
16S & 16	MS3057-8A	.875-20UNEF	14.2	.56	10.5	.41	24.0	.95	28.0	1.10	MS3420-8
18	MS3057-10A	1.000-20UNEF	15.8	.62	10.5	.41	28.5	1.12	33.0	1.30	MS3420-10
20 & 22	MS3057-12A	1.187-18UNEF	19.0	.75	10.5	.41	24.0	.95	35.0	1.38	MS3420-12
24 & 28	MS3057-16A	1.437-18UNEF	23.8	.94	10.5	.41	26.0	1.02	43.0	1.69	MS3420-16
32	MS3057-20A	1.750-18UNS	31.7	1.25	12.5	.49	28.0	1.10	51.0	2.01	MS3420-20
36	MS3057-24A	2.000-18UNS	35.0	1.38	14.0	.55	29.4	1.16	58.0	2.28	MS3420-24
40	MS3057-28A	2.250-16UN	41.2	1 62	14.0	55	42.8	1 68	65.0	2 56	MS3420-28

Bushing



MS 3420 - XX



Bushing of synthetic rubber to be used with cable clamps MS 3057 A for protection of the cable or wires. These bushings can be telescoped for smaller cable diameters.

MS 3420-XX

Bushing Part Number	Used With Cable Clamp	A dia		В		C dia	э.	D	
MS3420-4	MS3057-4A	5.58	.220	7.7	.30	12.8	.50	69.8	2.75
MS3420-6	MS3057-6A	7.92	.312	10.8	.43	15.7	.62	66.8	2.63
MS3420-8	MS3057-8A	11.09	.437	14.0	.55	18.8	.74	63.5	2.50
MS3420-10	MS3057-10A	14.27	.562	15.6	.61	22.6	.89	60.3	2.37
MS3420-12	MS3057-12A	15.87	.625	18.8	.74	27.5	1.08	57.1	2.25
MS3420-16	MS3057-16A	19.05	.750	23.5	.93	33.3	1.31	53.9	2.12
MS3420-20	MS3057-20A	23.79	.937	31.5	1.24	40.5	1.59	50.8	2.00
MS3420-24	MS3057-24A	31.75	1.250	34.7	1.37	46.9	1.85	47.6	1.87
MS3420-28	MS3057-28A	34.92	1.374	41.0	1.61	52.9	2.08	44.4	1.75





Connector Accessories

Waterproof clamp for jacketed cables. Provides mechanical strain relief plus concentric clamping over a wide range of cable sizes.

A Neoprene gland seal ensures a waterproof seal on the cable jacket.

Note: Other materials available.







"C" Style Clamp With Gland



Cable Clamp MS-3057-XXC

For "C" Style Clamp Bushing



Bushing MS3420-XXA



BELTRONICA

From Wire Size

0 AWG

0 AWG 2/0 AWG

6 mm²

6 mm²

10 mm² 16 mm²

16 mm²

16 mm² 16 mm²

25 mm²

25 mm² 25 mm²

50 mm²

95 mm² 150 mm²

150 mm²

50 mm²

50 mm²

То

Wire Size

2 AWG

4 AWG

6 AWG

8 AWG

16 mm²

20 mm²

25 mm² 35 mm²

25 mm²

1.5 mm² 2.5 mm²

12 AWG

2.5 mm²

4 mm² 6 mm²

10 mm²

6 mm² 10 mm²

16 mm² 25 mm²

70 mm²

70 mm²

95 mm²

16 mm²

35 mm²



			<u> </u>
VEAM	From	То	VEAM
Part Number	Wire Size	Wire Size	Part Numbe
45378	16 AWG	20 AWG	45373
45370	16 AWG	22 AWG	LV242999-82
47227-16-24	16 AWG	24 AWG	LV242999-92
47227-16-0.12	16 AWG	26 AWG	LV242999-10
45372	12 AWG	16 AWG	46664
LV242999-142	12 AWG	18 AWG	47227-53-20
LV242999-152	12 AWG	20 AWG	45375
LV242999-172	10 AWG	16 AWG	45376
LV242999-12	8 AWG	10 AWG	47227-7025
46661	8 AWG	12 AWG	47227-6-1.5
LV242999-122	8 AWG	14 AWG	47227-6-2.5
LV242999-132	8 AWG	16 AWG	45379
45374	8 AWG	6 mm ²	47227-16-2.5
46263	8 AWG	4 mm ²	47227-16-4
47227-8-2.5	8 AWG	2.5 mm ²	47227-16-6
47227	8 AWG	1.5 mm ²	47227-16-10
LV242999-32	8SP	12 AWG	47227-25-6
46269	4 AWG	6 AWG	47227-25-10
46660	4 AWG	8 AWG	47227-25-16
LV242999-192	4 AWG	10 AWG	47227-50-25
46650	4 AWG	12 AWG	47227-95-70
46665	4 AWG	16 mm ²	47227-150-7
46666	4 AWG	10 mm ²	47227-150-9
46667	4 AWG	6 mm ²	46266
47227-2-4	2 AWG	4 AWG	46264

Crimp Reduction Sleeves

Used to reduce the size of the contact crimp bucket to accept smaller gauge wires.

NOTE: Add suffix T9 for silver plating, T12 for gold plating. For other options, consult **Customer Service Department.**



Grommet Hole Sealing Range								
Hole Size	Sealin	Sealing Range						
	mm inch							
18-20	2.0-2.5	.0810						
16	2.2-2.8	.0911						
12	3.1–3.5	.1214						
8	5.9-6.5	.2326						
4	7.1–7.7	.2830						
0	12.1-12.8	.4850						

Contact Hole Plugs

Used to fill a grommet or insert cavity in lieu of a contact to maintain the environmental seal.

Conta AWG	ct Size DIN	Hole Plugs For Grommet	Color	Hole Plugs For Insert	Color
20	10	10-101033-11	Red	46808-20	Red
16S, 16	15, 155	10-101033-12	Blue	46808-16	Blue
16S,	16 High	10-101033-11	Red	LMB-G-3	Blue
Densit	y Inserts				
12	25	10-101033-13	Yellow	10-101033-13	Yellow
8	60, 100	10-101033-14	White	10-305045	White
4	160	10-101033-15	Green	10-305045-4	White
0	500	10-305045-0	Black	10-101033-16	Black
0 (G	round)			10-305045-01	White

Note: Hole plugs are installed from the rear and sit flush with the rear of the insert.



N	4	7
2		

Protective Plastic Caps



Protective vinyl caps are available upon request to guard against entry of moisture, dirt and other foreign matter to the contact area during shipment.

	For Receptacles CIR 00, 01, 020, 030, 070, TB	For Plugs CIR 06, 08	For Plugs CIR 06GG, 08GG	For Plugs CIR 065	For Plugs CIR 064
Shell Size	Part Number	Part Number	Part Number	Part Number	Part Number
10SL	#26	#35	#45	#35	#35
14S	#38	#42	#51	#51	#45
165	#41	#45	#55	#51	#48
16	#42	#45	#55	#51	#48
18	#45	#51	#57	#53	#53
20	#51	#55	#57	#56	#56
22	#53	#56	#65	#57	#57
24	#56	#57	#65	#58	#58
28	#58	#65	#71	#66	#66
32	#66	#71	#76	#76	#75
36	#71	#76	#81	#78	#78
40	#76	#81	#82	#81	#81



VEAM CIR Assembly Guide

CIRTF

CIRTV





Protective metal caps which seal the front of plugs or receptacles. Include a chain for retention of the cap at the required location. Other methods of attachment are available.



TF Caps (for receptacles CIR00, 01, 020, 030, 05, 070, TB)

VEAM	D1		D2		L1		L2	
Part	Maxi	mum	mm+	0.5 inch+.020	Maxi	mum	Approx	kimate
Number	mm	/inch	mm-0	0.25 inch010			mm	'inch
CIR10SLTF	23.5		4.4		16.5		127.0	
		.93		.173		.65		5.00
CIR14STF	30.5		4.4		16.5		127.0	
		1.20		.173		.65		5.00
CIR16STF	33.0		4.4		16.5		127.0	
		1.30		.173		.65		5.00
CIR16TF	33.0		4.4		21.0		127.0	
		1.30		.173		.83		5.00
CIR18TF	37.5		4.4		21.0		127.0	
		1.48		.173		.83		5.00
CIR20TF	41.0		4.4		21.0		127.0	
		1.61		.173		.83		5.00
CIR22TF	44.0		4.4		21.0		127.0	
		1.73		.173		.83		5.00
CIR24TF	47.5		4.4		21.0		127.0	
		1.87		.173		.83		5.00
CIR28TF	54.5		5.6		21.0		190.0	
		2.15		.220		.83		7.48
CIR32TF	61.0		5.6		21.0		190.0	
		2.40		.220		.83		7.48
CIR36TF	67.5		5.6		21.0		175.0	
		2.66		.220		.83		6.89
CIR40TF	73.0		5.6		21.0		190.0	
		2.87		.220		.83		7.48

TV Caps (for plugs CIR06, 08)

VEAM	D1		D.		L1	L2		
Part	Maximum		mm+0.5	inch+.020	Max	dmum	Appro	oximate
Number	mm	/ inch	mm-0.25	inch010	mm	/ inch	mm	/ inch
CIR10SLTV	21.0		4.4		24.0		127.0	
		.83		.173		.94		5.0
CIR14STV	27.5		4.4		24.0		127.0	
		1.08		.173		.94		5.0
CIR16STV	30.0		4.4		24.0		127.0	
		1.18		.173		.94		5.0
CIR16TV	30.0		4.4		32.0		127.0	
		1.18		.173		1.26		5.0
CIR18TV	33.5		4.4		32.0		127.0	
		1.32		.173		1.26		5.0
CIR20TV	37.0		4.8		32.0		140.0	
		1.45		.189		1.26		5.5
CIR22TV	40.0		4.8		32.0		140.0	
		1.57		.189		1.26		5.5
CIR24TV	43.5		4.8		32.0		140.0	
		1.71		.189		1.26		5.5
CIR28TV	49.5		4.8		32.0		190.0	
		1.95		.189		1.26		7.5
CIR32TV	56.0		5.6		32.0		190.0	
		2.20		.220		1.26		7.5
CIR36TV	62.5		5.6		32.0		190.0	
		2.46		.220		1.26		7.5
CIR40TV	67.7		5.6		32.0		190.0	
		2.66		.220		1.26		7.5



		VEAM			Remov	1	
Contact	Wire Size	Contact	Insertion	Removal	Replace	ment Parts	Guide Pins
Size	(AWG)	Number	Tool	Tool Kit	Handles	Tips	
20P	20	46730-20P	T98143	11-7576-101	0148B	46592M-VPT	
205	20	46731	T98143	11-7576-101	0148B	46592M-101S	27977-20T50
18P	18	46740P	T98143	11-7576-37	0148B	46592M-37PT50	
185	18	467405	T98143	11-7576-37	0148B	46592M-375T50	27977-20150
18P	20-22	46740-15P	T98143	11-7576-37	0148B	46592M-37PT50	
185	20-22	46740-155	T98143	11-7576-37	0148B	46592M-37ST50	27977-20150
18P	16	46740-22P	11-7345	11-7576-37	0148B	46592M-37PT50	
185	16	46740-225	11-7345	11-7576-37	0148B	46592M-37ST50	27977-20T50
16S P	16	27911	11-7345	A43240			
16S S	16	27961	11-7345	A43240			27977-16T50
16S P	20-24	27911-13	11-7345	A43240			
16S S	20-24	27961-13	11-7345	A43240			27977-16T50
16S P	20	27911-15	T98143	A43240			
165.5	20	27961-15	T98143	A43240			27977-16T50
165 P	14-16	27911-20	11-7345	A43240			
165.5	14-16	27961-20	11-7345	A43240			27977-16T50
165 P	12-14	27911-26	46736	A43240			
165 S	12-14	27961-26	46736	A43240			27977-16T50
16P	16	27913	11-7345	A43240			
165	16	27963	11-7345	A43240			27977-16750
16P	24-26	27913-08	11-7345	A43240			
165	24-26	27963-08	11-7345	A43240			27977-16750
16D	20-22	27913-12	T98143	A43240			
165	20-22	27963-12	T98143	A43240			27977-16750
16D	20-22	27913-13	T98143	A43240			27577-10150
165	20-22	27963-13	T98143	A 132 10 A 43240			27977-16750
16P	18-20	27913-15	11-7345	A43240			
165	18-20	27963-15	11-7345	A43240			27977-16750
16D	14-16	27913-20	11-7345	A43240			27577-10150
165	14-16	27963-20	11-7345	A43240			27977-16750
16P	12-14	27913-26	46736	A43240			2/3//-10130
165	12-14	27963-26	46736	A43240			27977-16T50
120	9	27914-8	46736-6	A 132 10			21511 10150
125	8	27964-8	46376-6	A43240			27077-12750
120	20-24	2014-0	40370-0	A43240			2/9//-12130
125	20-24	27964-12	40736	A43240			27077-12750
120	14 19	27904-12	40730	A43240			2/9//-12130
125	14-10	27914-20	40730	A43240			27077 12750
120	2.5 mm	27904-20	40730	A43240			2/9//-12130
120	2.5 mm	27914-22	40730	A43240			
120	1.2	27904-22	40730	A43240			2/9/7-12130
125	12	27914-20	40730	A43240			27077 12750
120	12	27904-20	40730	A43240			2/9//-12130
120	4 mm ag	27914-30	40730	A43240			
125	4 mm sq	27964-30	46736	A43240			2/9//-12150
120	10	27914-38	46736-6	A43240			
0D	0	27015		A 42240 0	01400	2 0 2 5 2	
or	0	27025	A40151-0150	A43240-0	01405	2-8252	Not Required
05 00	0	27935	A46151-8150	A43240-8	01488	2-8251	Not Required
8P 96	12-14	27915-26-62	A46151-8150	A43240-8	01488	2-8252	Not Required
05 00	12-14	27935-26-62	A46151-8150	A43240-8	01488	2-8251	Not Required
8P 9C	12-14	27915-26	A46151-8150	A43240-8	01488	2-8252	Not Required
85 85	12-14	27935-26	A46151-8150	A43240-8	01488	2-8251	Not Required
82 95	4 mm sq	27915-30	A46151-8T50	A43240-8	0148B	2-8252	Not Required
05	4 mm sq	21933-30	A40131-8150	A43240-8	U148B	2-8251	NOT REQUIRED







*Assembly manual available upon request



Insertion Tools



Guide Pins



A43240 Removal Kit



Contact Size	Wire Size (AWG)	VEAM Contact Number	Insertion Tool	Removal Tool Kit	Removal Tool Kit Replacement Parts Handle Tips		Guide Pins	
8P	10	27915-38	A46151-8T50	A43240-8	0148B-8	2-8252	Not Required	
85	10	27935-38	A46151-8T50	A43240-8	0148B-8	2-8251	Not Required	
8P	6	27915-58	A46151-8T50	A43240-8	0148B-8	2-8252	Not Required	
85	6	27935-58	A46151-8T50	A43240-8	0148B-8	2-8251	Not Required	
4P	4-6	27916	A46151-4T50*	46150-4	46150	11-7370-4	Not Required	
45	4-6	27936	A46151-4T50*	46150-4	46150	11-7674-2	Not Required	
4P	2.5mm sq.	27916-22	A46151-4T50*	46150-4	46150	11-7370-4	Not Required	
45	2.5mm sq.	27936-22	A46151-4T50*	46150-4	46150	11-7674-2	Not Required	
4P	16mm sq.	27916-62	A46151-4T50*	46150-4	46150	11-7370-4	Not Required	
45	16mm sq.	27936-62	A46151-4T50*	46150-4	46150	11-7674-2	Not Required	
OP	0	27917V	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	0	27937V	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	8	27917-45	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	8	27937-45	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	10mm sq.	27917-50	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	10mm sq.	27937-50	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	16mm sq.	27917-62	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	16mm sq.	27937-62	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	25mm sq.	27917-78	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	25mm sq.	27937-78	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	35mm sq.	27917-90	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	35mm sq.	27937-90	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	50mm sq.	27917-107	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	50mm sq.	27937-107	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
OP	4	46646-0	A46151-0T50*	46150-0	46150	11-7370-5	Not Required	
05	4	47647-0	A46151-0T50*	46150-0	46150	11-7674-3	Not Required	
4/0 P	2	47107-90	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	2	47114-90	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 P	0 (1/0)	47107-115	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	0 (1/0)	47114-115	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 P	2/0	47107-135	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	2/0	47114-135	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 P	70mm sq.	47107-144	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	70mm sq.	47114-144	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 P	95mm sq.	47107-155	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	95mm sq.	47114-155	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 P	4/0	47107-165	Not Required	Not Required	Not Required	Not Required	Not Required	
4/0 S	4/0	47114-165	Not Required	Not Required	Not Required	Not Required	Not Required	

*For solder contacts use TIP P/N SD46151-4T50 and SD46151-0T50.

Assembly manual available upon request.



TOOL KITS FOR CONNECTOR ASSEMBLY

Deluxe Model Assembly Kit

The VEAM Model DMC 292 M is housed in a case with die cut poly-foam compartments to nest each tool. A complete set of connector assembly instructions is provided on a CD and stored within the tool case for easy access.

DMC 292 M

Part Number 1. AF8 2. 616266 3. G125 4. M2700-420 5. 11-7345 6. 46736 7. A43240 8. 45-123 9. 45-092 10. TG70 11. 140 12. 27977-16T50 13. 27977-12T50 14. H183BKF7240LNO

Tool Kit Contents Description Crimp Tool Frame Turret Inspection Gauge Wrench Insertion Tool Insertion Tool Removal Tool Kit Wire Cutter Wire Stripper Mini Strap Wrench Assembly Manual CD Guide Pin Size 16 Guide Pin Size 12 **Carrying Case**





VEAM CIR Assembly Guide

Rear Mounting Data-Maximum Panel Thickness

	Dimension D										
	CIR 00/020		CIR 030		GG/ D Mate CIR) Max. d with 030	CIR TB				
Size	inches	mm	inches	mm	inches	mm	inches	mm			
10SL	.15	3.7	.28	7.2	.16	4.0	.39	10.0			
14S	.15	3.7	.28	7.2	.14	3.5	.38	9.6			
165	.15	3.7	.28	7.2	N/A	N/A	.38	9.6			
16	.15	3.7	.29	7.5	.14	3.5	.54	13.8			
18	.15	3.7	.29	7.5	.12	3.0	.51	13.0			
20	.15	3.7	.29	7.5	.12	3.0	.51	13.0			
22	.15	3.7	.29	7.5	.12	3.0	.51	13.0			
24	.21	5.4	.29	7.5	.06	1.5	.45	11.4			
28	.21	5.4	.32	8.2	.10	2.5	.49	12.4			
32	.24	6.1	.29	7.5	.04	1.0	.35	9.0			
36	.24	6.1	.29	7.5	.04	1.0	.35	9.0			
40	.24	6.0	.29	7.5	.039	1.0	.35	9.0			

CIR 00/020/030



Panel Cut-out Dimensions



Tightening torque for CIR07-070 receptacles

Size	N/m min.	In/lb min.
10SL	15.6	138
14S	18.6	164.6
16S	19.6	173.5
16	19.6	173.5
18	23.5	208
20	25.5	225.7
22	29.4	260.2
24	35.3	312.4
28	39.2	347
32	42.2	373.5
36	44.1	390.3
40	49	433.7

Shell Size	A T I Hole mm	hrough Mtg. Diameter inch	A Threa Hole I mm	aded Mtg. Diameter inch	B⊣ CIROO mm	⊦/004 ,020/0303 inch	C Diam N CIR mm	eter Front Iount 200,020 inch	C Dia Rear CIR(mm	ameter Mount 00,020 inch	D Dia CIR0 mm	meter 7/070 inch	E D CIR07 mm	im. 7/070 inch
10SL	3.2	426	4.5		18.2	747	17.45		19.05		22.23		21.10	
		.126		.177		./1/		11/16		3/4		7/8		.83
14S	3.2	.126	4.5	.177	23.0	.906	20.62	13/16	25.40	1	28.58	1 1/8	27.43	1.08
165	3.2		4.5		24.6		23.80		28.58		31.75		30.73	
103		.126		.177		.969		15/16		1 1/8		1 1/4		1.21
16	3.2		4.5		24.6		23.80		28 58		31.75		30.73	
10		.126		.177		.969		15/16	20.50	1 1/8		1 1/4		1.21
18	3.2		4.5		27.0		26.97		31.75		34.92		33.53	
		.126		.177		1.063		1 1/16		1 1/4		1 3/8		1.32
20	3.2		4.5		29.4		30.15		34.92		38.10		36.83	
20		.126		.177		1.157		1 3/16		1 3/8		1 1/2		1.45
22	3.7		4.5	177	31.8		33.32		38.10		41.27		39.90	
		.146		.177		1.252		1 5/16		1 1/2		1 5/8		1.57
24	3.7		5.5	247	34.9	4 274	36.50	4 7 4 6	41.27		44.45		43.30	
		.146		.217		1.374		1 //16		1 5/8		1 /34		1.70
28	3.7		5.5		39.7		42.85		47.63		50.80		49.53	
		.146		.217		1.563		1 11/16		<u>1 7/8</u>		2		1.95
32	4.3		5.5	247	44.5		49.20	4 45 44 6	53.98		57.15		55.88	
		.169		.217		1.752		1 15/16		2 1/8		2 1/4		2.20
36	4.3	1.00	5.5		49.2		53.98		60.33		63.50		62.23	
		.169		.217		1.937		2 1/8		2 3/8		2 1/2		2.45
40	4.3	100	5.5	217	55.5		60.38	2.2/0	66.68		69.85		68.58	
		.169		.217		2.185		2 3/8		2 5/8		2 3/4		2.70



BELTRONICA

VEAM CIR Assembly Guide

VEAM has developed a front replaceable coupling ring for field repair of damaged cable assemblies, in the even CIR coupling rings are accidentally distorted.

This allows you to repair a damaged cable assembly without removing backshell hardware, electrical contacts, or cable from the connector. no special tools are required. This method is very quick and easy. It will cut equipment down time to minutes instead of hours or days.

Procedure:

1. Cut away the distorted coupling ring (be careful not to damage the wave washer, flat washer, or plug shell).

2. Install the front replaceable coupling ring as illustrated below.

Figure 29



1. MATERIAL CONTENT AND PHYSICAL FORM

Electrical connectors do not usually contain hazardous materials. They contain conducting and non-conducting materials and can be divided into two groups.

a) Printed circuit types and low cost audio types which employ all plastic insulators and casings.

b) Rugged, Fire Barrier and High Reliability types with metal casings and either natural rubber, synthetic rubber, plastic or glass insulating materials. Contact materials vary with type of connector and also application and are usually manufactured from either: Copper, copper alloys, nickel, alumel, chromel or steel. In special applications, other alloys may be specified.

2. FIRE CHARACTERISTICS AND ELECTRIC SHOCK HAZARD

There is no fire hazard when the connector is correctly wired and used within the specified parameters. Incorrect wiring or assembly of the connector or careless use of metal tools or conductive fluids, or transit damage to any of the component parts may cause electric shock or burns. Live circuits must not be broken by separating mated connectors as this may cause arcing, ionization and burning. Heat dissipation is greater at maximum resistance in a circuit. Hot spots may occur when resistance is raised locally by damage, e.g. cracked or deformed contacts, broken strands of wire. Local overheating may also result from the use of the incorrect application tools or from poor quality soldering or slack screw terminals. Overheating may occur if the ratings in the product Data Sheet/Catalog are exceeded and can cause breakdown of insulation and hence electric shock. If heating is allowed to continue it intensifies by further increasing the local resistance through loss of temper of spring contacts, formation of oxide film on contacts and wires and leakage currents through carbonization of insulation and tracking paths. Fire can then result in the presence of combustible materials and this may release noxious fumes. Overheating may not be visually apparent. Burns may result from touching overheated components

3. HANDLING

Care must be taken to avoid damage

to any component parts of electrical connectors during installation and use. Although there are normally no sharp edges, care must be taken when handling certain components to avoid injury to fingers. Electrical connectors may be damaged in transit to the customers, and damage may result in creation of hazards. Products should therefore be examined prior to installation/use and rejected if found to be damaged.

4. DISPOSAL

Incineration of certain materials may release noxious or even toxic fumes.

5. APPLICATION

Connectors with exposed contacts should not be selected for use on the current supply side of an electrical circuit, because an electric shock could result from touching exposed contacts on an unmated connector Voltages in excess of 30 V ac or 42.5 V dc are potentially hazardous and care should be taken to ensure that such voltages cannot be transmitted in any way to exposed metal parts of the connector body. The connector and wiring should be checked, before making live, to have no damage to metal parts or insulators, no solder blobs, loose strands, conducting lubricants, swarf, or any other undesired conducting particles. Circuit resistance and continuity check should be made to make certain that there are no high resistance joints or spurious conducting paths. Always use the correct application tools as specified in the Data Sheet/Catalog. Do not permit untrained personnel to wire, assemble or tamper with connectors. For operation voltage please see appropriate national regulations.

IMPORTANT GENERAL INFORMATION

(i) Air and creepage paths/Operating voltage. The admissible operating voltages depend on the individual applications and the valid national and other applicable safety regulations.

For this reason the air and creepage path data are only reference values. Observe reduction of air and creepage paths due to PC board and/or harnessing.

(ii) Temperature

All information given are temperature limits. The operation temperature depends on the individual application.

(iii) Other important information

Cannon continuously endeavors to improve their products. Therefore, Cannon products may deviate from the description, technical data and shape as shown in this catalog and data sheets.

ITT Interconnect Solutions, a Division of ITT Corporation manufactures the highest quality products available in the marketplace; however these products are intended to be used in accordance with the specifications in this publication. Any use or application that deviates from the stated operating specifications is not recommended and may be unsafe. No information and data contained in this publication shall be construed to create any liability on the part of Cannon. Any new issue of this publication shall automatically invalidate and supersede any and all previous issues.

Product Warranty

A limited warranty applies to Cannon products. In general, except for obligations assumed by Cannon under this warranty, Cannon shall not be liable for any loss, damage, cost of repairs, incidental or consequential damages of any kind, whether or not based on express or implied warranty, contract, negligence or strict liability arising in connection with the design, manufacture, sale, use or repair of the products. Product availability, prices and delivery dates are exclusively subject to our respective order confirmation form; the same applies to orders based on development samples delivered. Please refer to www.ittcannon.com (General Terms of Sale) for the complete text of Cannon's applicable Terms and Conditions, including Warranty.

This publication is not to be construed as an offer. It is intended merely as an invitation to make an offer. By this publication, Cannon does not assume responsibility or any liability for any patent infringements or other rights of third parties which may result from its use.

Reprinting this publication is generally permitted, indicating the source. However, Cannon's prior consent must be obtained in all cases. "Engineered for life" is a registered trademark of ITT Corporation ©2006. All other trademarks or registered trademarks are property of their respective owners. All dates subject to change without notice.

Commodities in this catalog may be controlled for export by the International Traffic in Arms Regulations (ITAR) and Export Administration Regulations (EAR) when specifically designed modified, or configured for articles controlled by the United States Government.





Notes



BELTRONICA

Circular/Filter/Hermetic/Fiber Optic Connectors

As a world leader in circular, filter, and hermetic connectors, ITT can leverage its design and manufacturing expertise to fit virtually any application. Our expertise includes fast positive mating for a wide range of military applications, as well as numerous sizes and contact configurations for various harsh environments. Our wide variety of fiber optic products include hybrid contacts, multi-channel, rack and panel, and hi-rel assemblies, including MIL and ARINC standard solutions.ITT can meet numerous specs, including NATO and MIL standards.



www.ittcannon.com/circulars • www.ittcannon.com/filter • www.ittcannon.com/hermetics • www.ittcannon.com/fiberoptics

D-Subminiature Connectors

Cannon invented D-sub connectors in 1952. Our family of D-Subs now includes combinations of signal, power and RF, as well as severe service sealed connectors. Cannon D-Subs are available with an extensive line of backshells and accessories and are one of the most economical shielded connector solutions available. ITT D-Sub connectors are qualified to the MIL-DTL-24308 specification.

www.ittcannon.com/dsubs-

Microminiature Connectors

Developed first by Cannon in the 1960's, Interconnect Solutions microminiature connectors offer high performance and reliability with exceptional versatility. Available in rectangular, circular, and strip configurations for countless applications, many of our connectors meet or exceed applicable requirements of the MIL-DTL-83513 specification.

www.ittcannon.com/micro -

Rack and Panel Connectors

Initially pioneered by Cannon during the 1930s, Interconnect Solutions is the world leader in rack and panel connectors, offering unmatched variety of shell configurations and insert arrangements, materials, plating, and contact options. Many of our standard and custom designs meet the stringent requirements of ARINC 600, ARINC 404 (MIL-C-81659), and MIL-DTL-83733 standards.

www.ittcannon.com/rackandpanel

RF Connectors

ITT Interconnect Solutions has been providing interconnect products to the Microwave and RF industry since 1963 (formerly The Sealectro Corporation). The RF 50 & 75 Ohm product lines cover UHF band through Ku band requirements. These connectors and cable assemblies are available with a thread type, snap type, bayonet type or slide on coupling method. The frequencies range from DC to 18+ GHz.

www.ittcannon.com/RF50 • www.ittcannon.com/RF75

Transportation

The ITT ICS interconnect range includes sealed circular and rectangular connectors in metal or plastic shells. These configurations include board to cable or cable to cable/ bulkhead applications. Both signal and power contacts can be combined in various layouts. All product lines within the Transportation segment offer very low contact resistance providing maximum signal integrity.

www.ittcannon.com/transportation

ITT Interconnect Solutions is an international manufacturer and supplier of connectors including circular, rectangular, fiber optic, RF, power and high voltage, audio, PMCIA, Compact Flash Card, enclosures, cable assemblies, and application specific custom solutions. The Interconnect Solutions portfolio includes the brands Cannon, VEAM, and BIW. As a worldwide leader in connector technology for nearly a century, ITT offers one of the broadest product offerings, six sigma manufacturing capability, Value Based Product Development with exceptional engineering capability, and an extensive sales, distribution, and customer support network.











ITT Interconnect Solutions Cannon, VEAM, BIW

Visit our website at www.ittcannon.com

North America

Customer Support

Global Design & Manufacturing

MEXICO - Cannon, VEAM Av. Libre Comercio s/nentre Calzada Industrial Nuevo Nogales y Calzada del Raquet Club, Parque Industrial Nuevo Nogales phone: +52.631.3110050 fax: +52.631.3110060

🐞 🕒 USA - Cannon

666 East Dyer Road Santa Ana, CA 92705 toll free: +1.800.854.3028 phone: +1.714.557.4700 fax: +1.714.628.2142

🔅 USA - BIW

500 Tesconi Circle Santa Rosa, CA 95401 phone: +1.707.523.2300 fax: +1.707.523.3567

USA - VEAM

100 New Wood Road Watertown, CT 06795 phone: +1.860.274.9681 fax: +1.860.274.4963



ENGINEERED FOR LIFE

Europe & Middle East

FRANCE - Cannon, VEAM
15, Boulevard Robert Thiboust
Serris, France 77700
phone: +33.1.60.04.93.93
fax: +33.1.60.04.93.90

GERMANY - Cannon, VEAM ITT Cannon GmbH Cannonstrasse 1 Weinstadt, 71384 phone: +49.7151.699.0 fax: +49.7151.699.217

ITALY - Cannon, VEAM Corso Europa 41/43 Lainate (MI), Italy 20020 phone: +39.02938721 fax: +39.0293872300

👝 LEBANON - BIW

P.O. Box 199 Jounieh Lebanon phone: +961.9.911.560 fax: +961.9.912.126

UK - Cannon, VEAM Jays Close, Viables Estate Basingstoke, RG22 4BA phone: +44.1256.311200 fax: +44.1256.323356

BELTRONICA

Avenida de Somosierra, 22 - Naves E 6 y 7 - P. E. Inbisa I San Sebastián de los Reyes - ES 28703 - Madrid

Tel / Phone: +34 916 381 331 - comercial@beltronica.es

Asia

 CHINA - Cannon, VEAM Tuopandun Industrial Area, Jinda Cheng, Xiner Village, Shajing Town, Baoan District, Shenzhen City, Guangdong, China 518125 phone: +86.755.2726.7238 fax: +86.755.2726.7515

HONG KONG - Cannon, VEAM Units 2405-6, 24/F, ING Tower 308 Des Voeux Road Central Hong Kong phone: +852.2732.2720 fax: +852.2732.2919

INDIA - Cannon, VEAM
ITT Corporation India Pvt Ltd
Money Chamber, Unit No. 202
#6, KH Road, Bangalore
560027
phone: +91 22 67843000
fax: +91 22 26783033

JAPAN - Cannon, VEAM
11-3, 5 Chome, Hibarigaoka,
Zama-shi, Kanagawa, Japan 228-0003
phone: +81.462.57.2010
fax: +81.462.57.1680

 SINGAPORE - Cannon, VEAM 10 Jalan Kilang #06-01 Singapore 159410 phone: +65.62763693 ext 232 fax: +65.62763685

© 2011 ITT Corporation "Engineered for life" and "Cannon" are registered trademarks of ITT Corporation. Specification and other data are based on information available at the time of printing, and are subject to change without notice.